




TV Stand Plans

Cut Sheet

*Face Frame:

Part	Amount	Size
Rails:	2	2 1/4" x 21"
Styles	2	1 1/2" x 27"

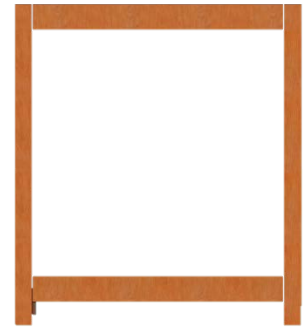


Raised Panel Sides:

Part	Amount	Size
Front Styles	2	2 1/2" x 27"
Back Styles	2	1 3/4" x 27"
Bottom Rail	2	2-1/2" x 11 7/8"
Top Rails (With Arches)	2	4-1/2" x 11 7/8"
Panels	2	11.875" x 20"



*Doors:

Part	Amount	Size
Styles	4	2 3/8" x 21"
Rails	4	2 1/4" x 7-1/4"
* Arched Rails		*with Arches: 4-1/2" x 7-1/4"
Panels	2	7-1/8" x 17-1/2"

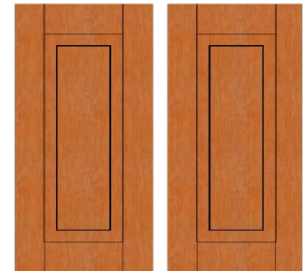

Base/Floor:

Part	Amount	Size
Base	1	15 3/8" x 23-1/2"



Top:

Part	Amount	Size
Top	1	20" X 30"



*must be modified for a drawer/shelf (see next page)

*all thicknesses are planed to 13/16" thick


*Space below bottom rail = 2-1/2"

Drawer Modification:




Face Frame:

Part	Amount	Size
Rails:	3	2" x 21"
Styles	2	1-9/16" x 27"

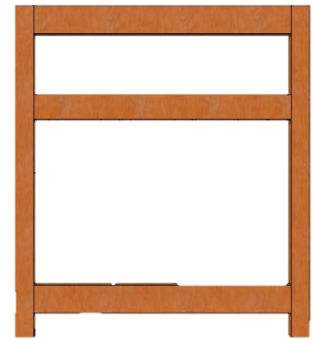

Doors:

Part	Amount	Size
Styles	4	2 3/8" x 14-1/4"
Rails	4	2 1/4" x 7-1/4"
Arched Rail		*with Arches: 7-1/4" x 4-1/4"
Panels	6	7-1/8" x 10-3/4"

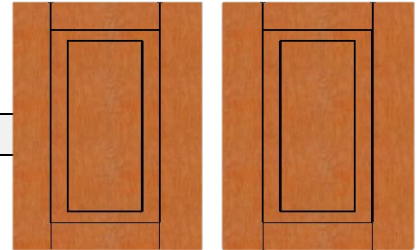

Dovetail Drawer:

Part	Amount	Size
Drawer Face	1	6" x 22"
Left and Right	2	4" x 13-3/4"
Front and Back	2	4" x 20"
Drawer Bottom	1	13-1/2" x 19-1/2"



*everything else is the same as the above page (Raised Panel Sides, Top, Base, etc.)

*Drawer Opening = 5" X 21"

*Door Opening = 13-1/4" X 21"

*Space below bottom rail = 2-1/2"

* Top rail should be placed 1/4" below the top of the stile, not flush with the top of the stile.